


BR36 Electric Schematic

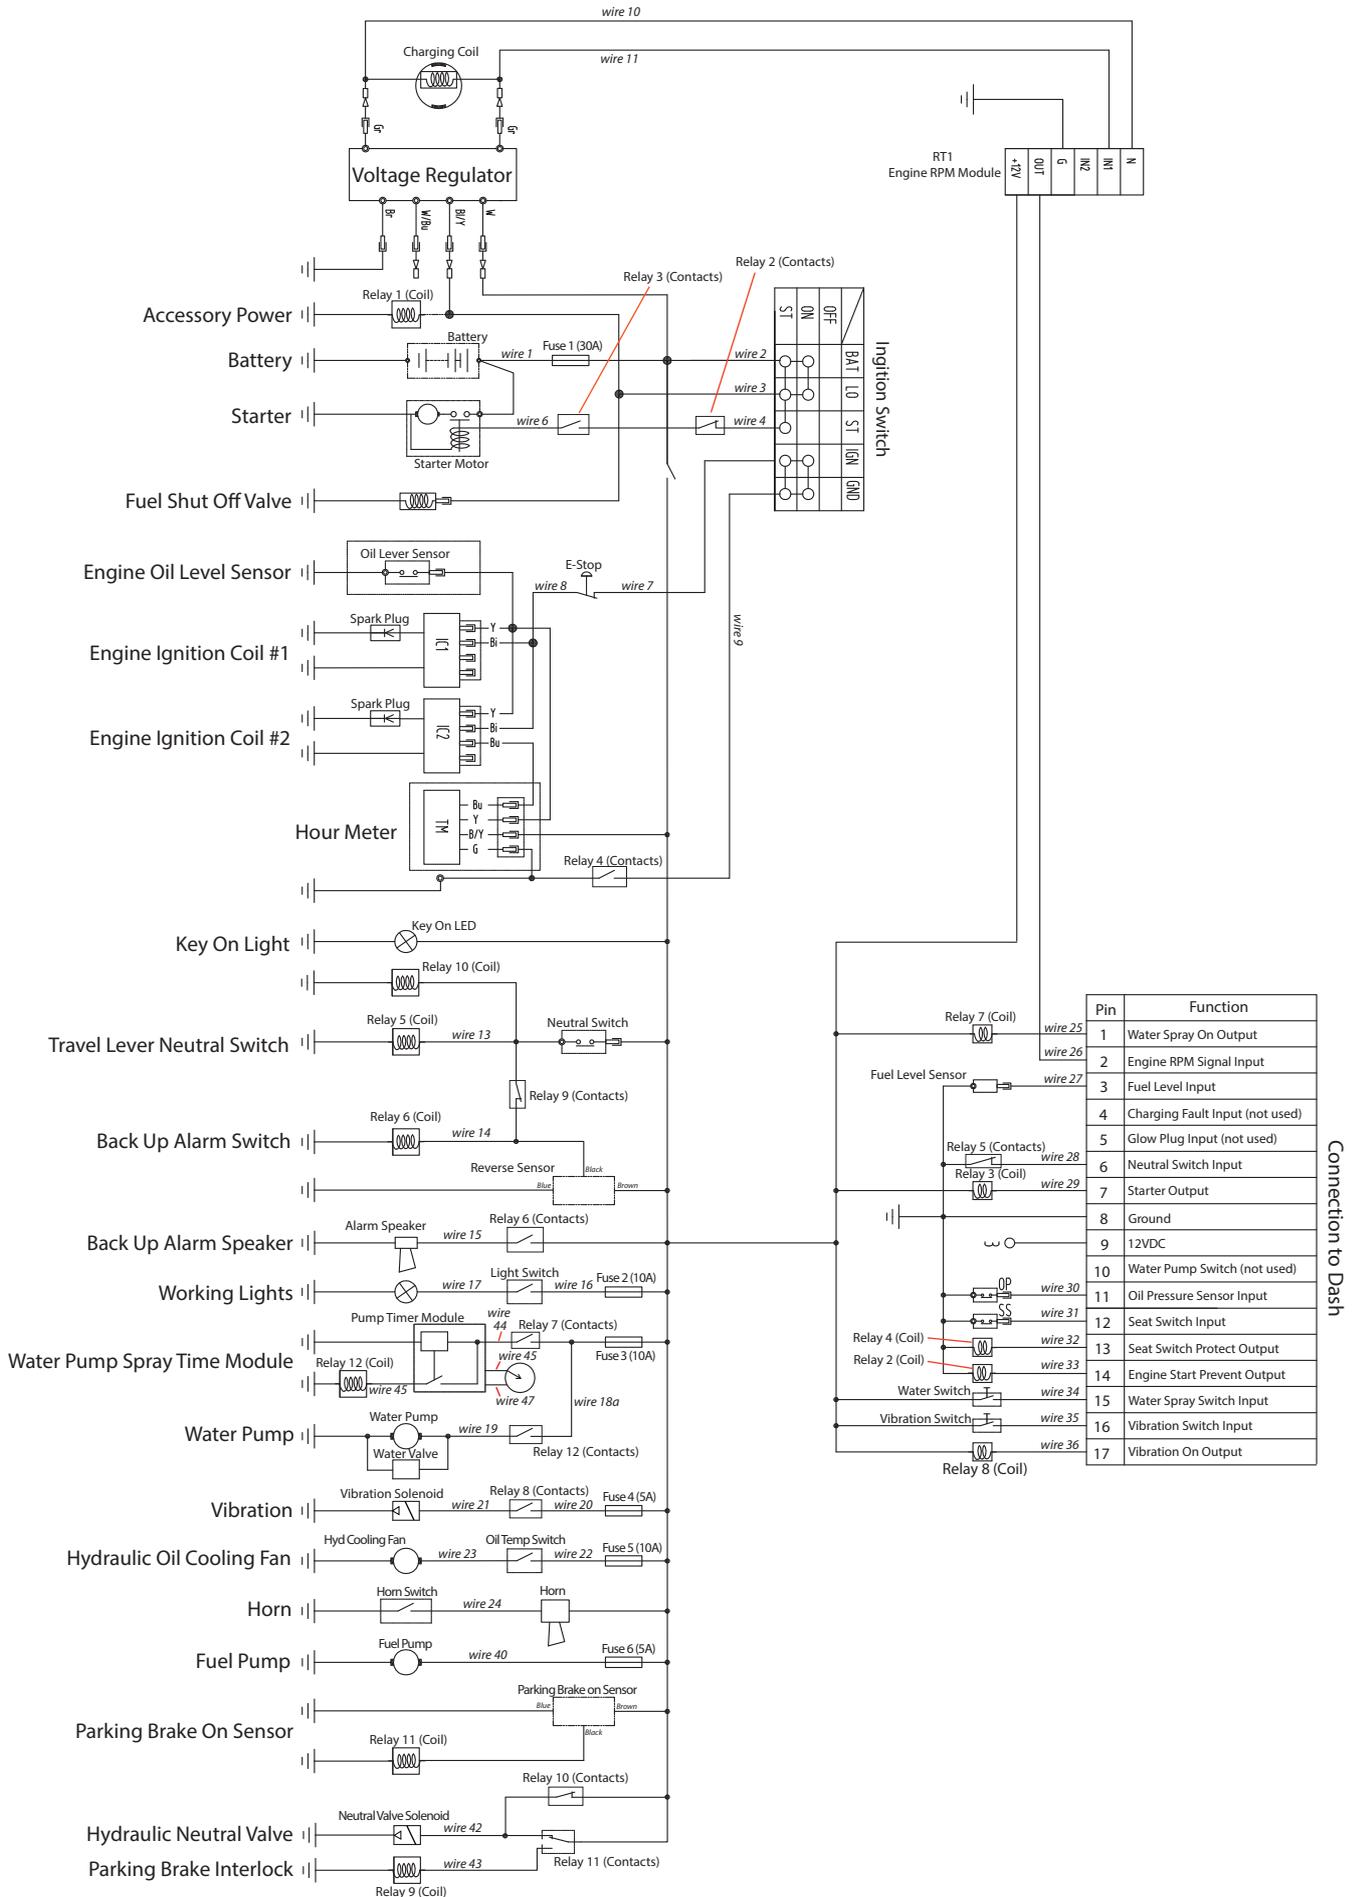

Pin	Function
1	Water Spray On Output
2	Engine RPM Signal Input
3	Fuel Level Input
4	Charging Fault Input (not used)
5	Glow Plug Input (not used)
6	Neutral Switch Input
7	Starter Output
8	Ground
9	12VDC
10	Water Pump Switch (not used)
11	Oil Pressure Sensor Input
12	Seat Switch Input
13	Seat Switch Protect Output
14	Engine Start Prevent Output
15	Water Spray Switch Input
16	Vibration Switch Input
17	Vibration On Output

Connection to Dash